


- All joints must be solvent cemented in accordance with PVC or conduit manufacturers' guidelines to guarantee a watertight chase.
- For underground chases, only ONE 30" or 32" radius sweep bend (45 or 90 degree) should be used at each end of the chase run.
- **CAUTION:** Plumbing-style PVC short radius factory "ells" are NOT acceptable.
- For overhead chases, a pull box or sleeve should be placed every 75' or every 3 radius bends, whichever occurs first.
- Installer must trim exposed ends to four inches above finished floor during product line installation.
- Conduits must be capped and sealed at both ends during construction, and must be resealed after product lines are installed.

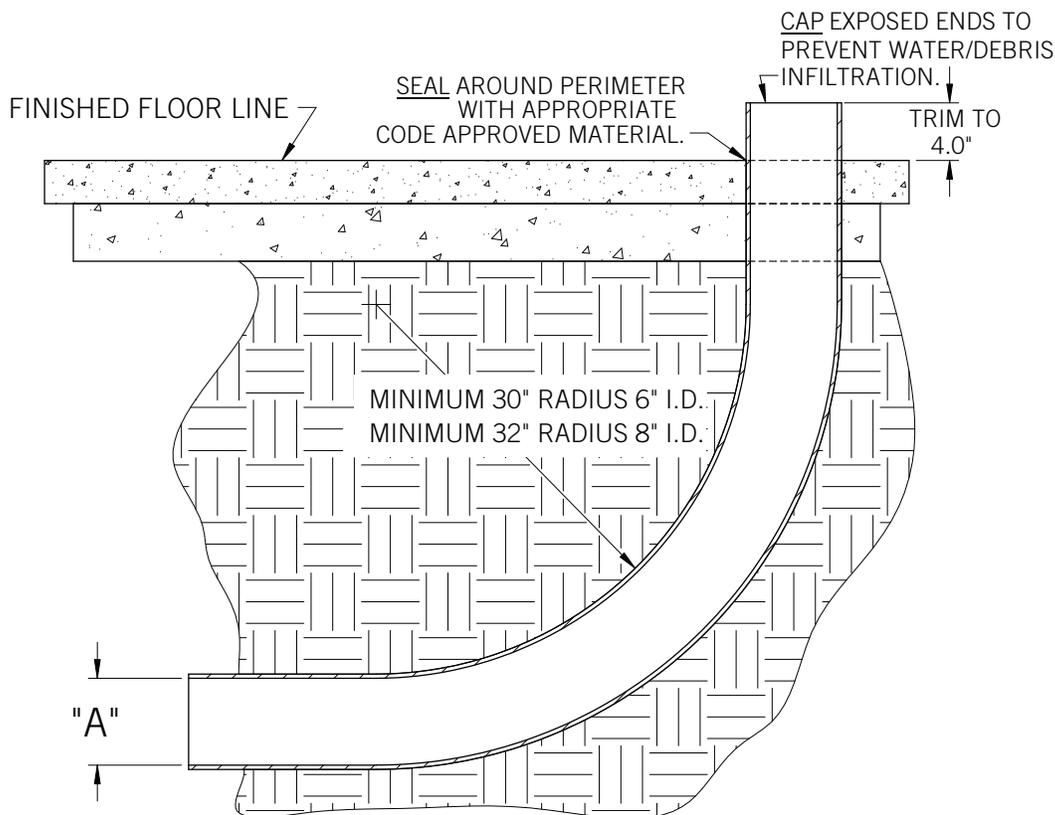

"A" (MIN. INSIDE DIA.)	MAXIMUM TRUNK HOUSING LINE QTY.
6.0"	12 LINES OR LESS
8.0"	14 – 20 LINES